



INSTALLATION GUIDE

M5345C




Item Checklist

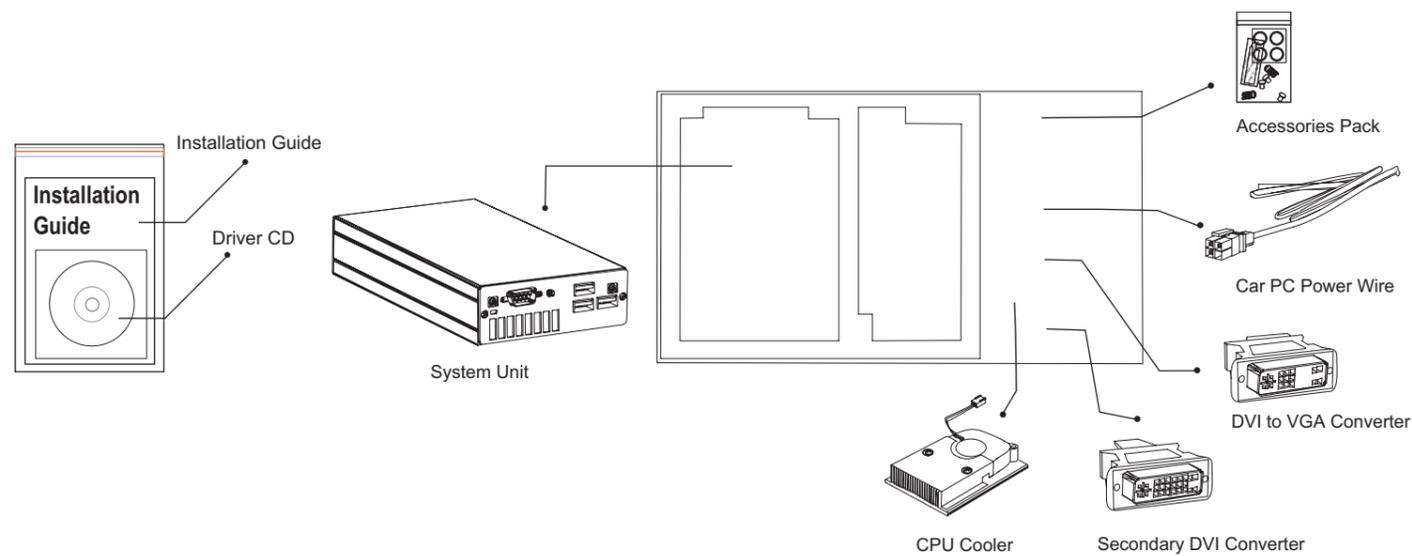

Barebone Unit Unpacking

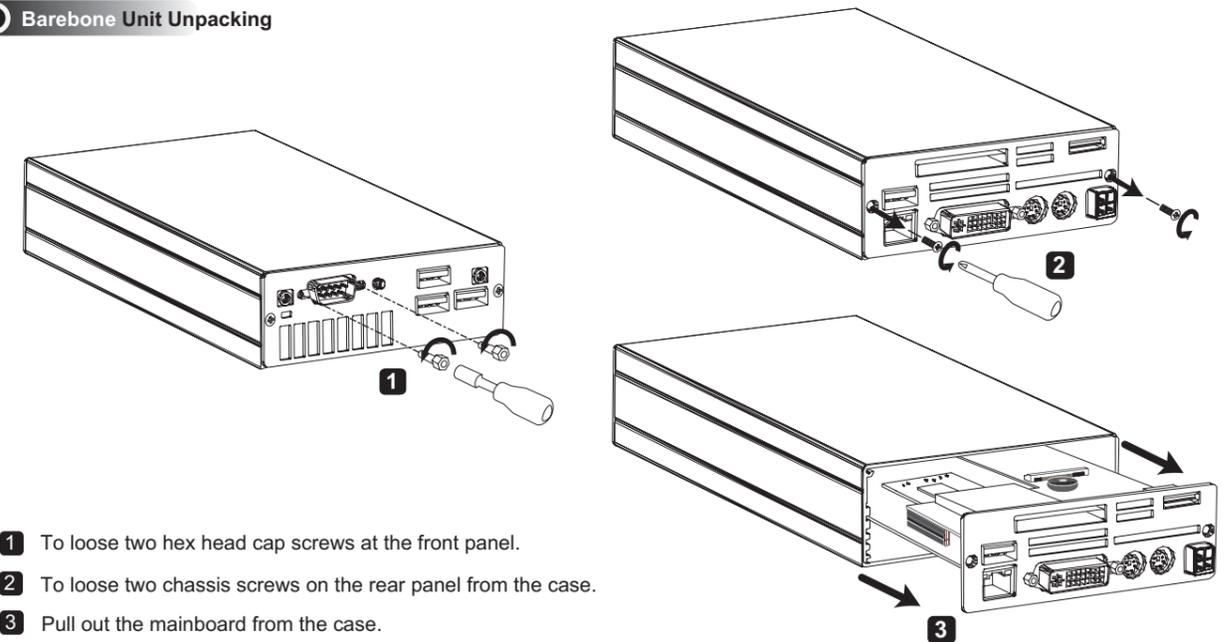

Mainboard and Optional Daughter Boards' Layout

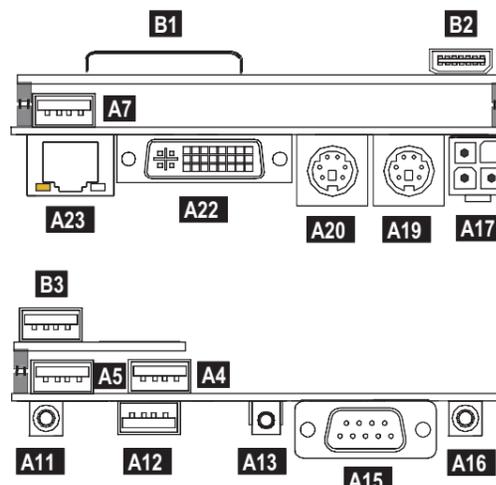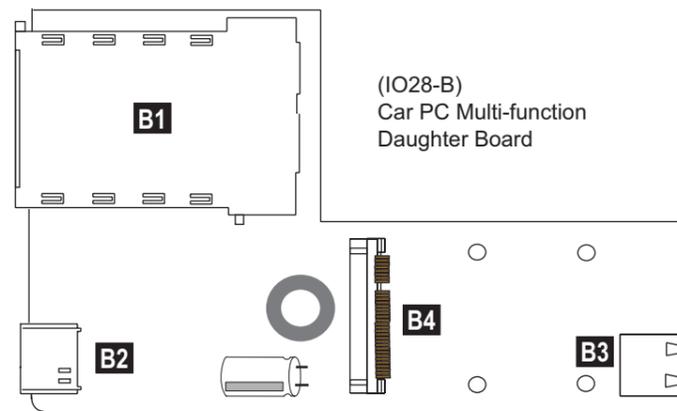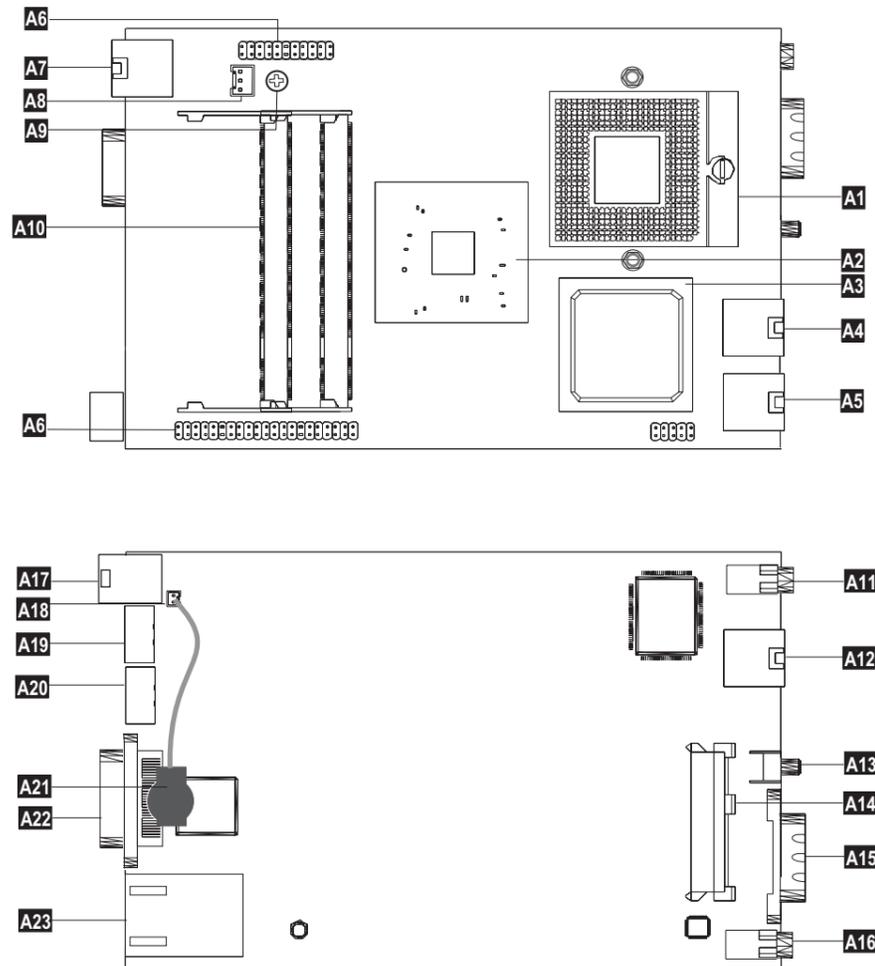

A1	CPU socket
A2	Intel GM45 north chip
A3	Intel ICH9M south chip
A4	Front USB port
A5	Front USB port
A6	Multi-function adapter slots
A7	Rear USB port
A8	CPU cooling fan connector
A9	HDD Screw
A10	DDR3 SODIMM slots
A11	Line-out phone jack
A12	Front USB port
A13	Power button
A14	SATA HDD/SSD connector
A15	Primary COM port
A16	Mic-in phone jack
A17	DC 10 ~ 26V power input
A18	Battery connector
A19	PS/2 mouse port
A20	PS/2 keyboard port
A21	CMOS battery
A22	DVI-I port
A23	LAN port

B1	PCI express card slot
B2	Secondary DVI port
B3	USB port
B4	Mini PCIe slot

Specifications are for reference only and subject to change without notice.

Hardware Installation

Part List


- (A)** COM/DVI Hex Head Cap Screws (* 4)
- (B)** Front Panel
- (C)** Rear Panel
- (D)** Case
- (E)** Mainboard
- (F)** CPU Cooler
- (G)** Car PC Power wire
- (H)** DVI to VGA Converter
- (I)** Car PC Multi-Function Daughter Board
- (J)** Secondary DVI Converter

Accessories Pack

- (A)** Hex Head Cap Screws * 2 (* 4 for S345S)
- (K)** Case Screws * 2
- (L)** CPU Cooler Screws * 2
- (M)** CPU Cooler Paste * 1
- (N)** Rubber Stand * 4
- (O)** Mini card screw * 2
- (P)** Mini card spacer and fastener * 4

STEP 1


Unpacking Motherboard from the chassis

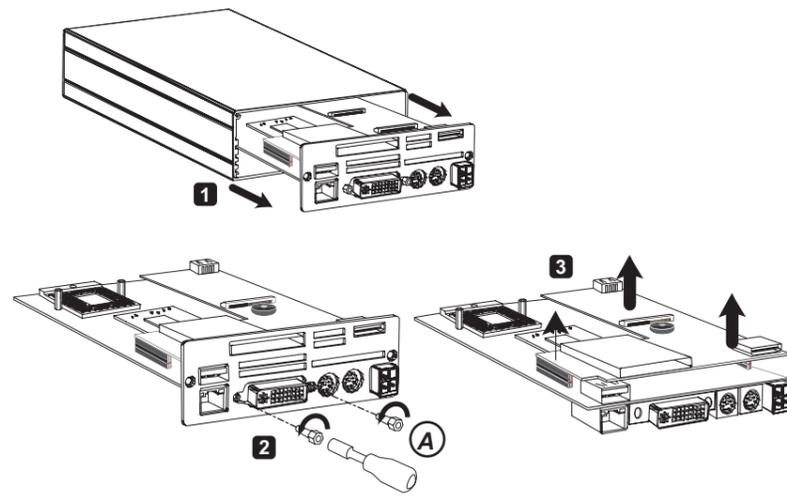

- 1** Pull out the motherboard from the case.
- 2** loose two hex head cap screws at the rear panel and remove the rear panel.
- 3** Take the daughter board apart from the motherboard carefully.

STEP 3


Installing CPU

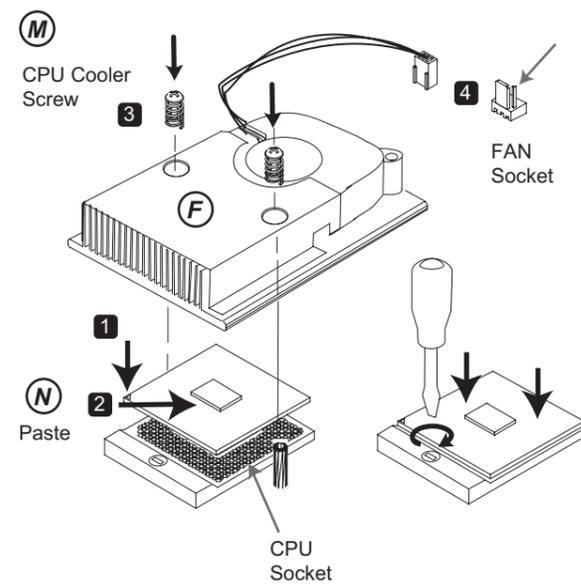

- 1** Seat the CPU into the socket. Match socket pin 1 and CPU cut edge. **Puch the CPU by a little force on the socket then closing the socket actuator with a screwdriver.**
- 2** Glue the heatsink compound on the CPU die surface.
- 3** Install CPU cooler on the top of CPU. Tighten CPU cooler with screws into pillaret.
- 4** Connecting CPU FAN plug to mainboard CPU FAN socket.

STEP 3


Installing Memory

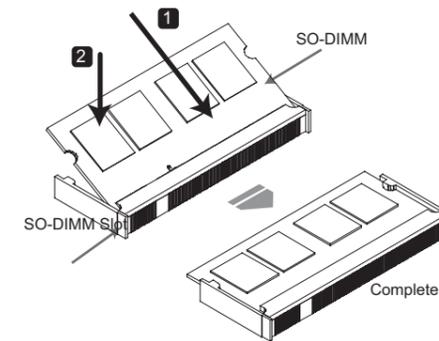

- 1** Insert SO-DIMM into the SO-DIMM slot on the motherboard by 30°.
- 2** Push down the SO-DIMM onto DIMM slot.

STEP 4


Installing 2.5" SATA HDD or SSD

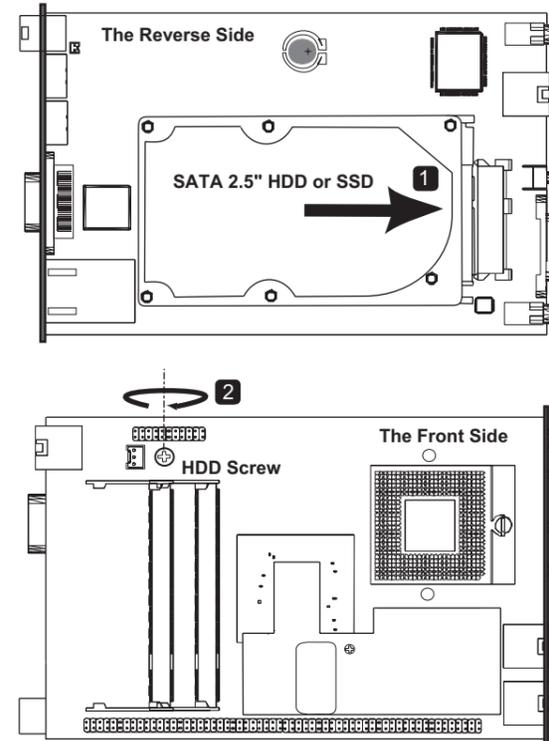

- 1** Insert 2.5" SATA HDD or SSD to the SATA connector on the reverse side of mainboard.
- 2** Turnover the mainboard and drive the screw at the front side of mainboard to fasten the HDD.

STEP 5

Car PC Power Cord Connection

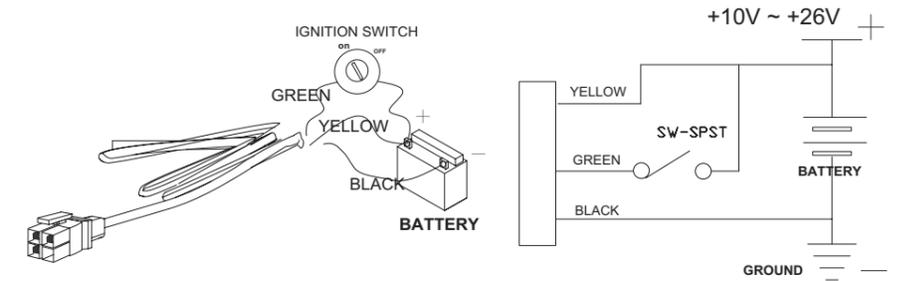

WARNING

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instruction manual may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- * Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and receiver.
- * Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- * Consult the dealer or an experienced radio TV technician for help.

Notice: The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equivalent.

The system uses portion of casing for partial heat dissipation, the normal operating temperature of casing is between 35°C ~ 45°C in room temperature environment.