



STEP 1

Removing motherboard from case


Note: This Addendum apply to model **S525P**, **S525G** and **S525G3**.
Before the installation of the CPU and memory, the motherboard has to be pulled out from the case and the daughter board has to be released from the motherboard.

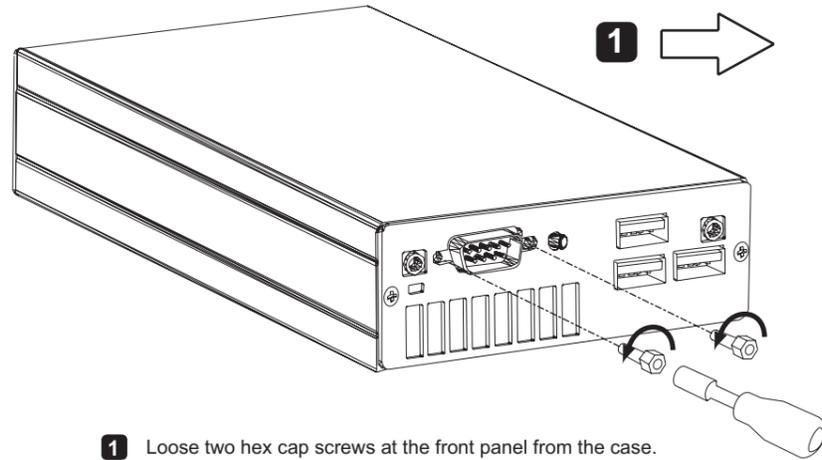


1 Loose two hex cap screws at the front panel from the case.

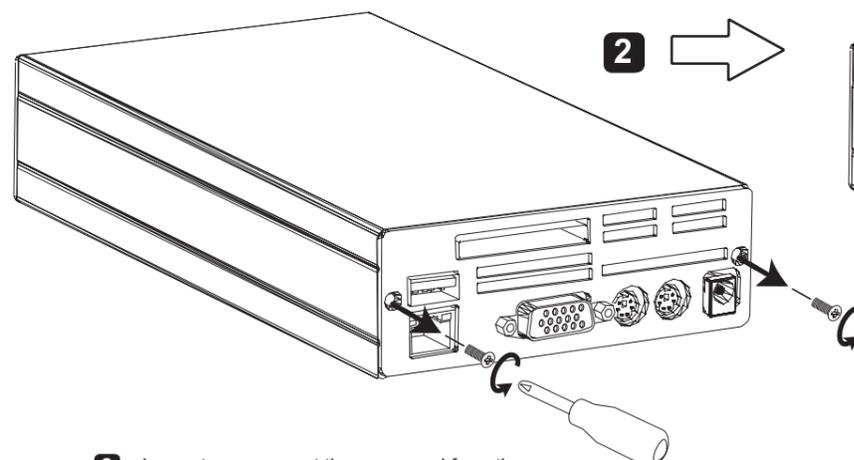


2 Loose two screws at the rear panel from the case.

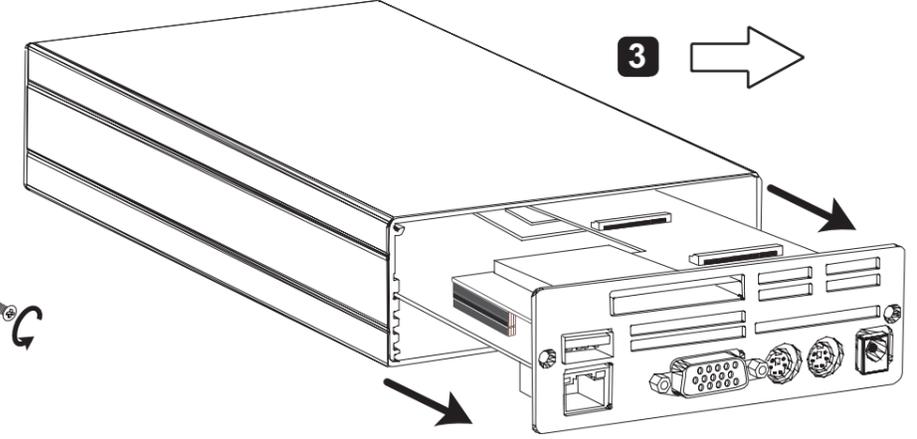

3 Pull out the motherboard from the case.

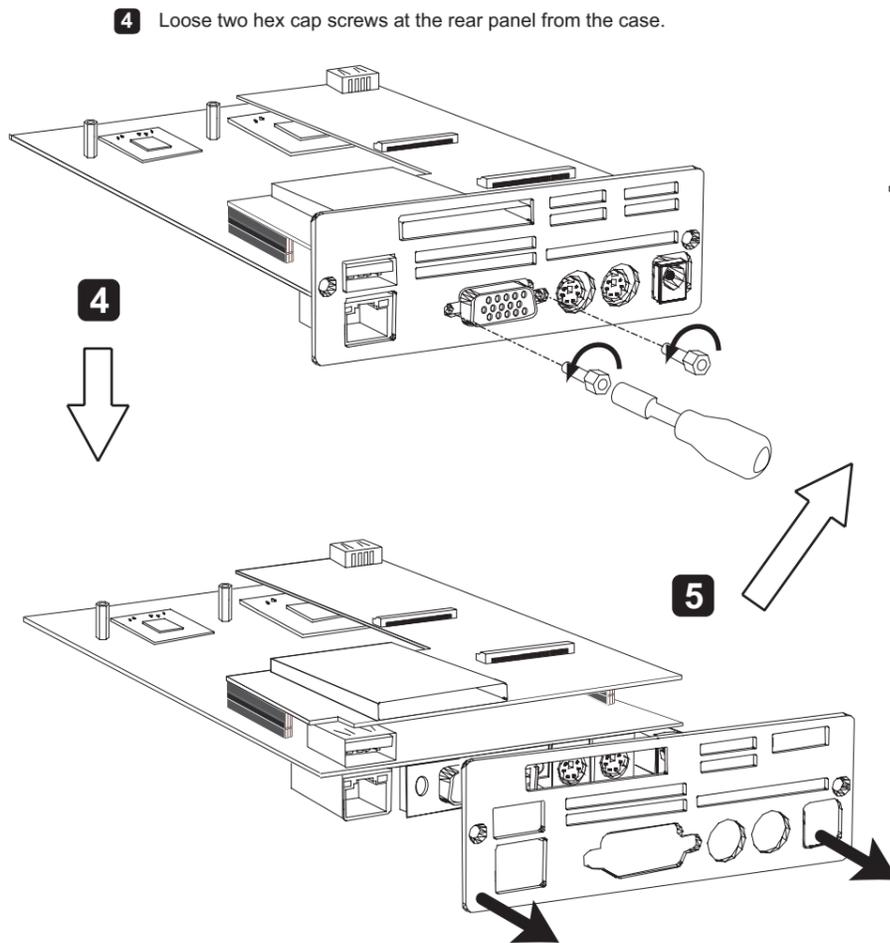


4 Loose two hex cap screws at the rear panel from the case.

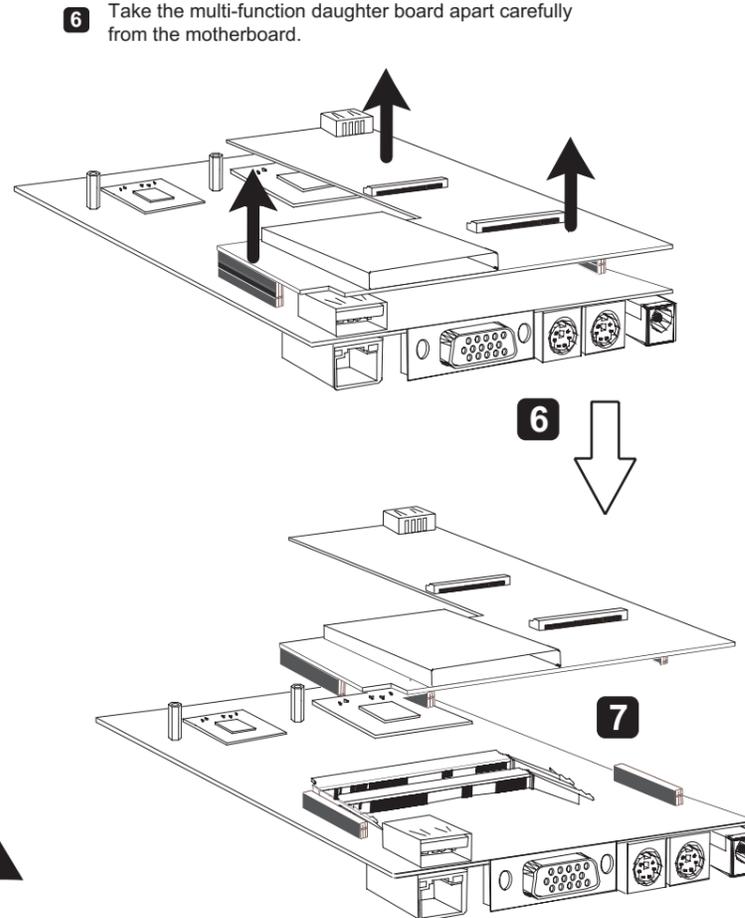

6 Take the multi-function daughter board apart carefully from the motherboard.

STEP 2


Installing Memory

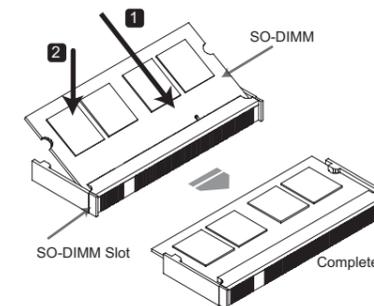

- 1 Insert SO-DIMM into the SO-DIMM slot on the motherboard by 30°.
- 2 Push down the SO-DIMM onto DIMM slot.

STEP 3

Installing CPU Cooler

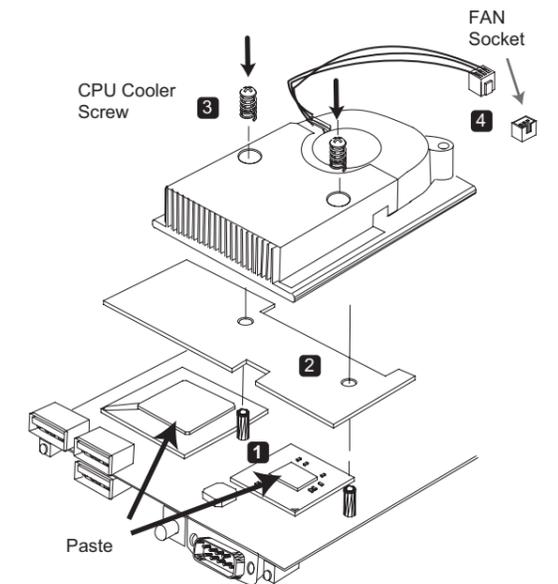

- 1 Glue the heatsink compound on the CPU die and Chip surface.
- 2 Install CPU and Chip heat sink on the top of CPU and Chip. Tighten CPU cooler with screws into pillaret.
- 3 Install CPU cooler on the heatsink and tighten CPU cooler with screws into pillaret.
- 4 Connecting CPU FAN plug to the mainboard CPU FAN socket.

5 Remove the rear panel away from the motherboard.

7