

Installation Guide

Hardware Installation

M0260

Part List


- A Drive Adapter
- B CD-ROM Bracket
- C CD-ROM Adapter
- D Insulate Pad
- E Print/COM/VGA Screws (* 6)
- F Front Panel
- G Rear Panel
- H Case
- I Mainboard

Installation Accessory Pack

- J EMI Sticker (* 2)
- K Plastic Spacer (* 2)
- L Slim HDD Screws (* 5)
- M CD-ROM Adapter Screws (* 3)
- N CD-ROM Screws (* 5)
- O Case Screws (* 2)
- P CPU Cooler Screws (* 4)
- Q Heat Sink Paste (* 1)


STEP 1

Install Slim HDD

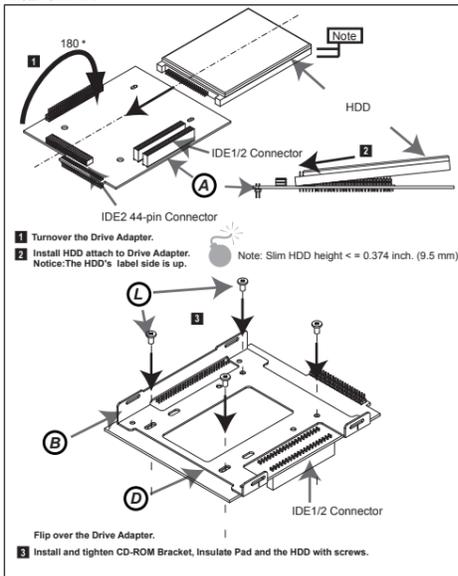


STEP 2

Install CD-ROM

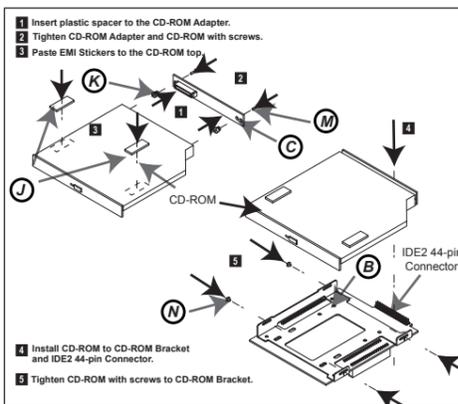

STEP 3


Install Drive Adapter to Mainboard

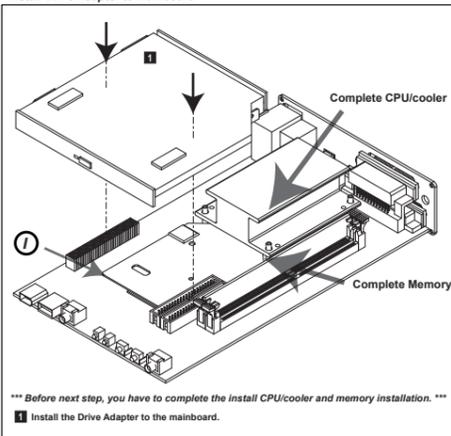


*** Before next step, you have to complete the install CPU/cooler and memory installation. ***
1 Install the Drive Adapter to the mainboard.

STEP 4

Install Case

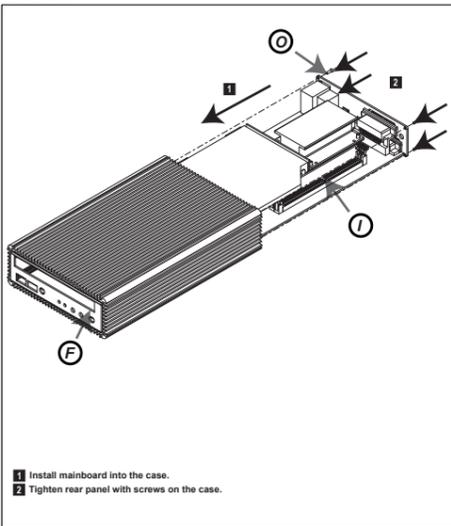

Complete System

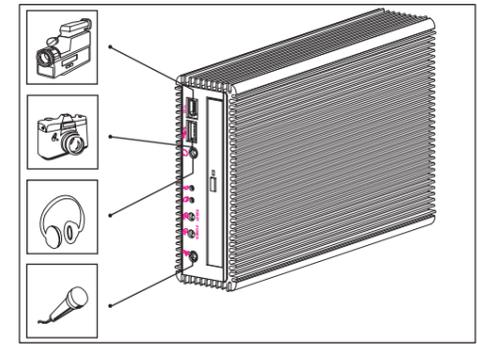

WARNING

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and if not installed and used in accordance with the instruction manual may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- * Reorient or relocate the receiving antenna.
- * Increase the separation between the equipment and receiver.
- * Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- * Consult the dealer or an experienced radio TV technician for help.

Notice: The changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equivalent.

The system uses entire casing for partial heat dissipation, so the normal operating temperature is between 40°C ~ 55°C.


Specifications are subject to change without notice, reference only.

Installation Guide


General Information

Item Checklist

Specifications are subject to change without notice, reference only.

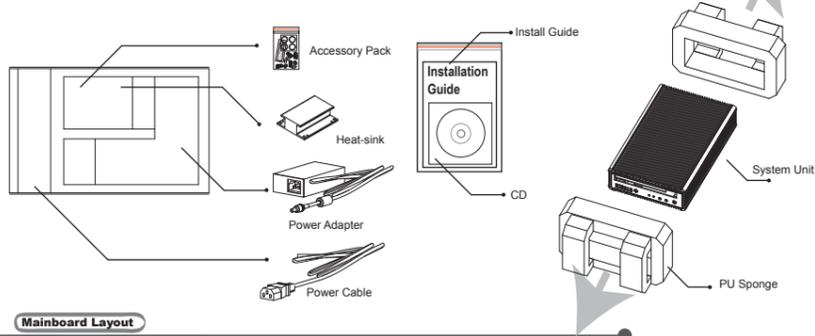



Mainboard Layout

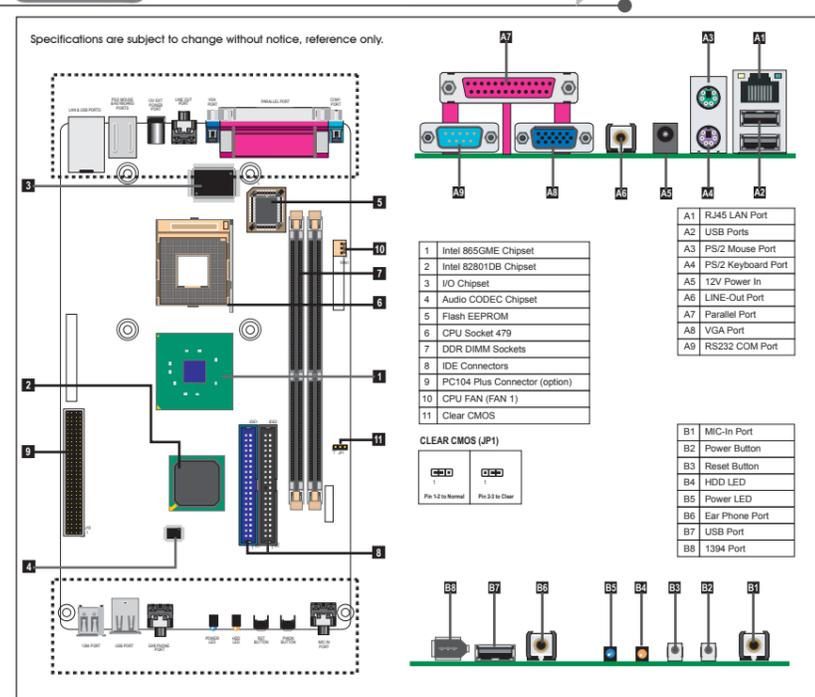

Barebone System Unpacking Guide


Procedure

- 1 Loose the screws on the rear panel from the case.
- 2 Pull out the mainboard from the case.
- 3 Uninstall the Drive Adapter from the mainboard.
- 4 Remove the plastic fastener and the CD-ROM Adapter from the Drive Adapter.

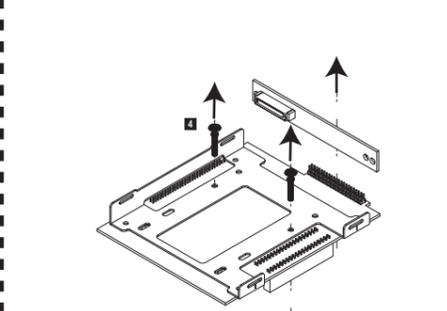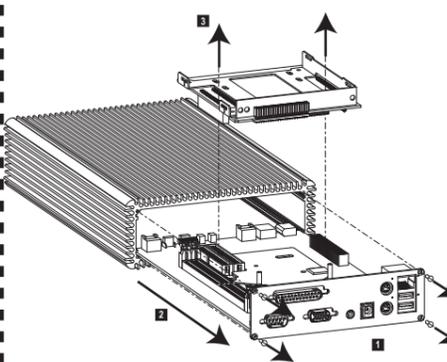

Please refer to "Hardware Installation" of "Installation Guide" for system installation procedure.

Install CPU / Cooler

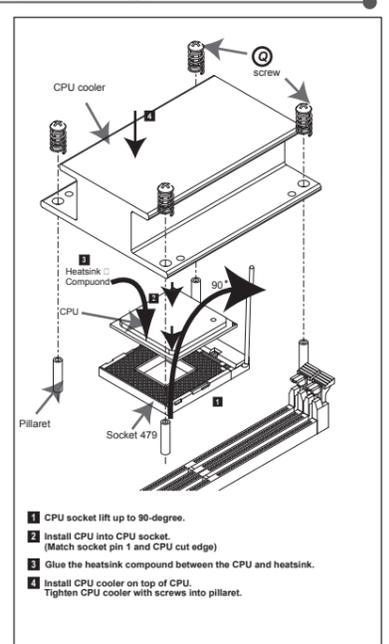

Install Memory

